 


Technical Data

AOFILL.N

OVERFILL LIMITER VALVE

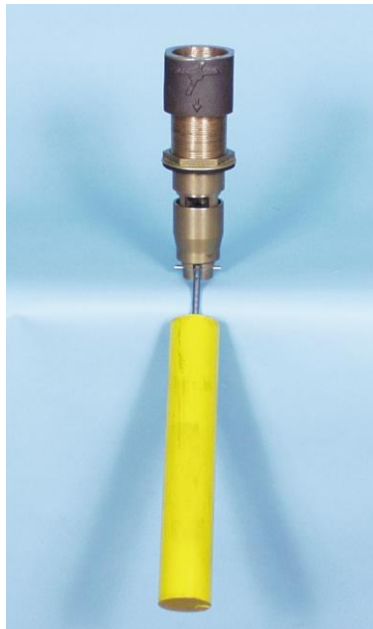 


Applies to the following models only

- AOFILL.N
- AOFILL.N.3

Please read carefully before commencing installation

ENVIRONMENTAL INFORMATION

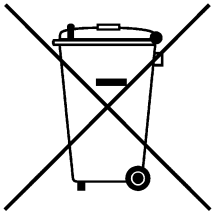

European Directives 2002/96/EC and 2003/108/EC require that the equipment bearing this symbol on the product an/or its packaging must not be disposed of with unsorted municipal waste. The symbol indicates that this product must be disposed of separately from regular household waste streams. It is your responsibility to dispose of this and other electric and electronic equipment via designated collection facilities appointed by the government or local authorities.

IMPORTANT WARNING NOTES

1. This GO AOFILL overfill limiter valve is only intended for use on above ground fuel storage tanks.
2. This valve must not be used on tanks containing petrol or any other flammable liquid.
3. Installation of this valve and its associated pipe-work should only be undertaken by qualified installation engineers.
4. Installation of this valve must conform to all relevant local authority standards and guidelines. When the fuel storage tank has been filled to its maximum capacity fuel will continue to flow through this valve at a minimal rate. An overfill will occur unless the fuel delivery is halted.

 


PARTS LIST

PART DESCRIPTION	PART NUMBER	
	AOFILL.N	AOFILL.N.3
Overfill Valve Body	AOF.BODY	AOF.3.BODY
Valve Sleeve	AOF.SLEEVE	AOF.3.SLEEVE
Brass Nut	AOF.NUT2	AOF.NUT3
Sealing Washer	LWASH.25F	LWASH.88
Float	AOF.FLOAT300	AOF.FLOAT300
Float Rod	AOF.ROD	AOF.ROD
Stainless Steel Pin 30mm Long	PIN.5.30SS	PIN.5.30SS
Stainless Steel Pin 50mm Long	PIN.5.50SS	PIN.5.50SS



AOFILL.N OVERFILL LIMITER VALVE

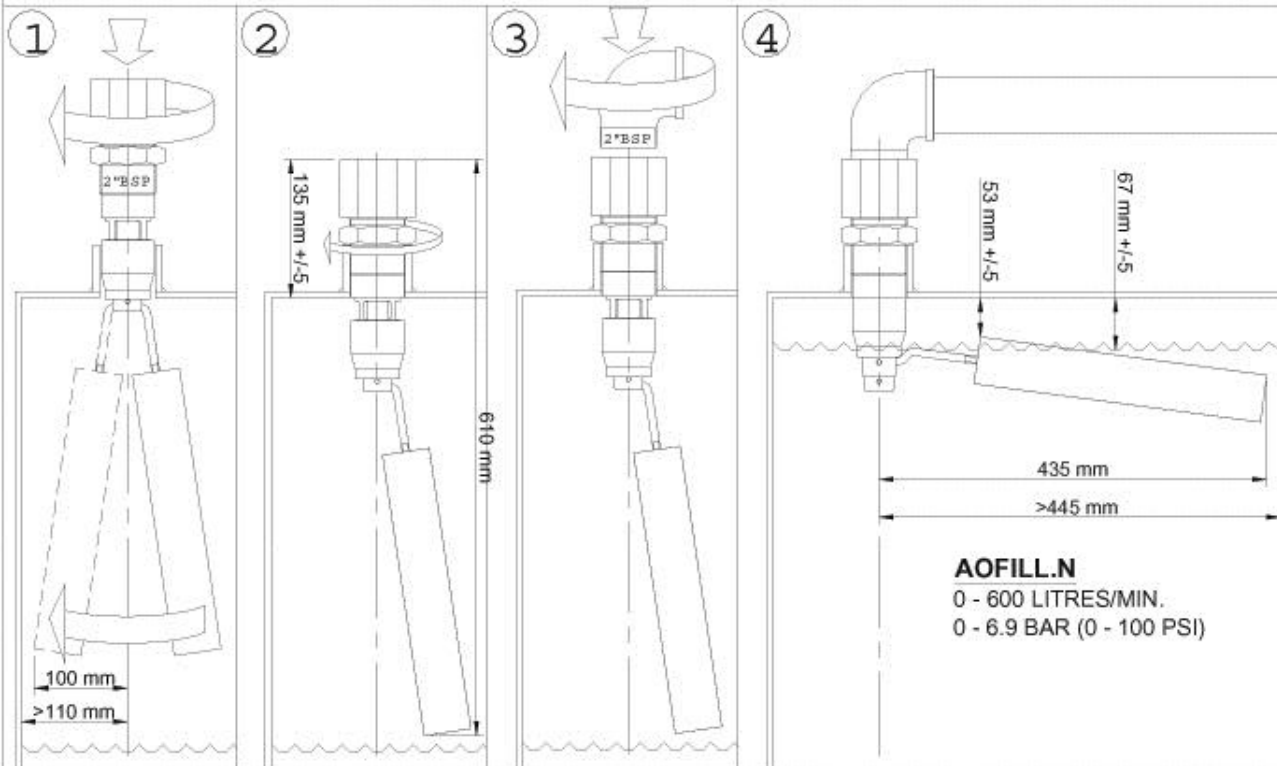 


WARNING

WHEN THE FUEL STORAGE TANK HAS BEEN FILLED TO MAXIMUM CAPACITY FUEL WILL CONTINUE TO FLOW THROUGH THE AOFILL.N AT A MINIMAL RATE. AN OVERFILL WILL OCCUR UNLESS THE FUEL DELIVERY IS HALTED.



AOFILL.N3 OVERFILL LIMITER VALVE

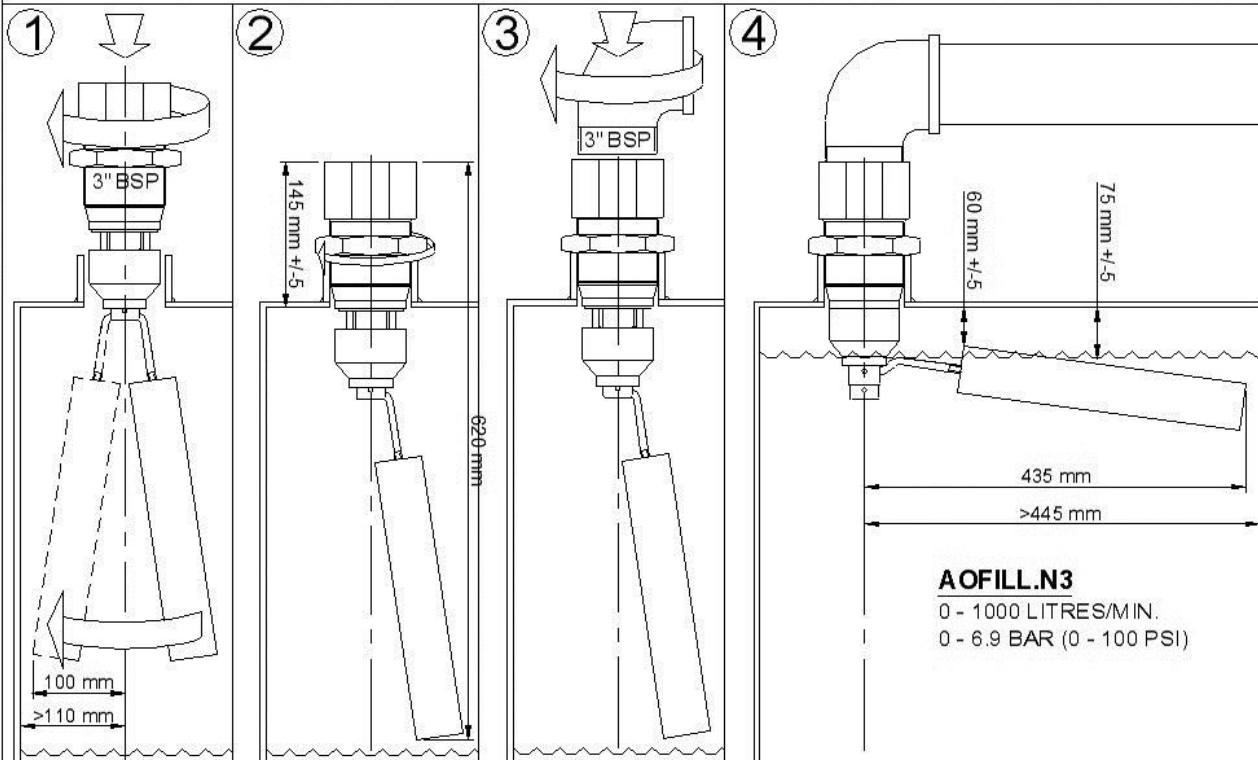

WARNING

WHEN THE FUEL STORAGE TANK HAS BEEN FILLED TO MAXIMUM CAPACITY FUEL WILL CONTINUE TO FLOW THROUGH THE AOFILL.N3 AT A MINIMAL RATE. AN OVERFILL WILL OCCUR UNLESS THE FUEL DELIVERY IS HALTED.