

TECHNICAL DATA SHEET

1. Identification of the product and of the company/undertaking

Product identifier

Twisted Wool Pad 150mm Grip	Code: 7990155111
Twisted Wool Pad 180mm Grip	Code: 7990185111
Twisted Wool Pad 180mm Double Sided	Code: 7992185111

Details of the supplier:

Company: KWH Mirka Ltd Address: Pensalavägen 210 FI-66850 Jeppo, Finland Phone: +358 20 760 2111 Fax: +358 20 760 2290 National contact: sales@mirka.com Emergency telephone number: +358 20 760 2111 Opening hours: Monday – Friday at 08:00 a.m. – 04:00 p.m. (UTC/GMT +2:00/+3:00)

2. General information

Twisted wool pads are made of 4 ply 100 % soft wool yarn, single-sided with grip attachment and double-sided with 5/8" thread (bolt on type).

Twisted wool pads are used for polishing of different kind of surfaces.

3. Instructions for use & safety

Step 1: Always wear eye protection and safety gloves.

Step 2: Recommended speed: 2000 – 3000 RPM. Do not exceed 5800 RPM. Use only with a backing pad. If used with a drill; do not exceed 3000 RPM

Step 3: Press firmly on the center of the polishing pad to insure contact with the backing pad. Polish at a low angle, almost flat. On contours and detail lines, reduce machine pressure to avoid burning.

The extension adapter (Adapter DS Twisted Wool Pad M14/W5"/8", code 7990999111) should be used with the double-sided pad. It is easily mounted and must be locked with the polisher.

4. Care and cleaning instructions of polishing pad

Periodically rake pad with buffing spur or air nozzle to remove excess compound.

If the pad gets clogged, remove it, change to a clean pad and continue polishing and allow the used pad to dry. When the used pads dry, clean by either spurring or washing or with any wire brush.





If washing is desired, use warm water up to 115°F / 45 °C. Do not use hot water, strong or alkaline detergents or solvents. Use washing machines with gentle agitation only. Machine drying is not recommended, air drying is enough.

