

## DutyMax EH/GH™ 230/300, DH230 HD Hydraulic Sprayers

334606J

EN

*For professional use only.*

*Not approved for use in explosive atmosphere or hazardous locations.*

*For portable airless spraying of architectural paints and coatings.*

3300 psi (22.8 MPa, 228 bar) Maximum Working Pressure

See page 3 for model information, including maximum working pressure and approvals.



### Important Safety Instructions


Read all warnings and instructions in this manual and in related manuals.

Be familiar with the controls and the proper usage of the equipment.


Save these instructions.

#### Related Manuals:

308491	DutyMax DH/GH230 Gun	334654	Pump
309495	DutyMax GH300 Gun	310812	Electric Motor

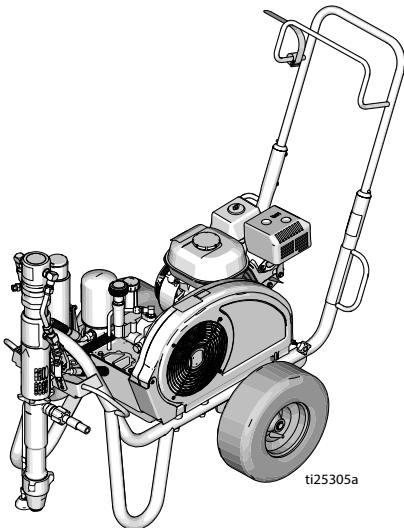

**Standard Series**

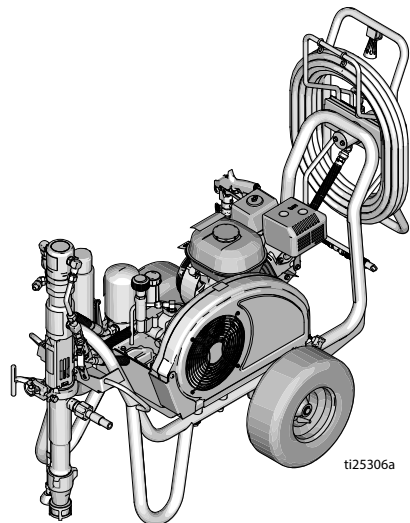

**ProContractor Series**

*Use only genuine Graco replacement parts.*

*The use of non-Graco replacement parts may void warranty.*




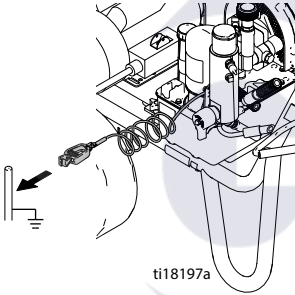
# Table of Contents

<b>Models</b> .....	<b>3</b>
Electric Motor Kit Options .....	3
OEM Kits .....	3
<b>Warnings</b> .....	<b>4</b>
Electric Motor Warnings .....	4
Internal Combustion Engine Warnings .....	7
Electric Motor/Internal Combustion Engine Warnings .....	8
<b>Component Identification</b> .....	<b>11</b>
Standard Models (EH/GH230, 300 HD) .....	11
ProContractor Models (EH/GH230, 300 HD) .....	12
ProContractor Model (DH230 HD) .....	13
<b>Grounding</b> .....	<b>14</b>
Grounding Procedure for Gas Engine .....	14
Grounding Procedure for Electric Motor .....	14
Grounding of Pails .....	15
Circuit Protection .....	15
<b>Setup</b> .....	<b>16</b>
Change Engine or Motor .....	16
Complete Setup .....	17
Pressure Relief Procedure .....	19
<b>Startup (Internal Combustion Models)</b> .....	<b>20</b>
<b>Startup (Electric Models)</b> .....	<b>23</b>
<b>How to Spray</b> .....	<b>25</b>
Switch Tip™ and Guard Assembly .....	25
Spray .....	25
Clear Tip Clogs .....	26
Hose Reel .....	26
<b>Clean Up</b> .....	<b>27</b>
<b>Maintenance</b> .....	<b>29</b>
<b>Troubleshooting</b> .....	<b>31</b>
<b>Standard Series Pump</b> .....	<b>33</b>
<b>ProContractor Series Pump</b> .....	<b>34</b>
<b>DutyMax EH/GH230/300 HD Standard Series Parts</b> .....	<b>37</b>
<b>DutyMax DH230/EH/GH230/300 HD ProContractor Series</b> .....	<b>49</b>
<b>Technical Data</b> .....	<b>64</b>
DutyMax EH230 HD Standard Series .....	64
DutyMax EH300 HD Standard Series .....	65
DutyMax GH230 HD Standard Series .....	66
DutyMax GH300 HD Standard Series .....	67
DutyMax EH230 HD ProContractor Series .....	68
DutyMax EH300 HD ProContractor Series .....	69
DutyMax DH230/GH230 HD ProContractor Series .....	70
DutyMax GH300 HD ProContractor Series .....	71
<b>Graco Standard Warranty</b> .....	<b>75</b>
<b>Graco Information</b> .....	<b>76</b>

## Grounding

### Grounding Procedure for Gas Engine

				
<p>The equipment must be grounded to reduce the risk of static sparking. Static sparking can cause fumes to ignite or explode. Grounding provides an escape wire for the electric current.</p>				



**To ground sprayer:** Attach sprayer grounding clamp to earth ground.


**Air and fluid hoses:** Use only electrically conductive hoses with a maximum of 500ft. (150 m) combined hose length to ensure grounding continuity. Check electrical resistance of hoses. If total resistance to ground exceeds 29 megaohms, replace hose immediately.

**Spray gun:** Ground through connection to a properly grounded fluid hose and pump.

### Power Requirements

- 110-120V units require 100-120 VAC, 50/60 Hz, 15A, 1 phase.
- 230V units require 230 VAC, 50/60 Hz, 16A, 1 phase
- 380-400V units require 400 VAC, 50 Hz, 16A, 3 phase, 3P+N+E, 6H power

### Grounding Procedure for Electric Motor

	<b>DANGER</b>
<b>HIGH VOLTAGE ELECTRIC SHOCK HAZARD</b>	
<p>This equipment uses high voltage power. Improper contact with high voltage equipment will cause death or serious injury.</p> <ul style="list-style-type: none"><li>• Turn off and disconnect power cord before servicing equipment.</li><li>• This equipment must be grounded. Connect only to grounded power source.</li><li>• Use only 3-wire extension cords for 240V and single phase models</li><li>• Use only 5-wire extension cords for 400 AC and three phase models.</li><li>• Ensure ground prongs are intact on power and extension cords.</li><li>• Do not expose to rain. Store indoors.</li><li>• All electrical wiring must be done by a qualified electrician and comply with all local codes and regulations.</li></ul>	

The sprayer cord includes a grounding wire with an appropriate grounding contact.

If using the electric motor, plug must be plugged into an actual outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not modify the plug provided; if it does not fit the outlet, have the proper outlet installed by a qualified electrician.

connection

- To operate the EH300DI (24W965) sprayer, the generator needs to be sized for 15 kW output (minimum).

## Extension Cords

Use an extension cord with an undamaged ground contact. If an extension cord is necessary, use a 3-wire, 12 AWG (2.5 mm<sup>2</sup>) minimum.

**NOTE:** Smaller gauge or longer extension cords may reduce sprayer performance.

## Grounding of Pails


**Solvent pails used when flushing:** Follow local code. Use only conductive metal pails, placed on a grounded surface. Do not place the pail on a non-conductive surface, such as paper or cardboard, which interrupts grounding continuity.



ti2380a

**Always ground a metal pail:** connect a ground wire to the pail. Clamp one end to the pail and the other end to a true earth ground such as a water pipe.

**To maintain ground continuity when sprayer is flushed or pressure is relieved:** hold metal part of spray gun firmly to the side of a grounded metal pail then trigger the gun.

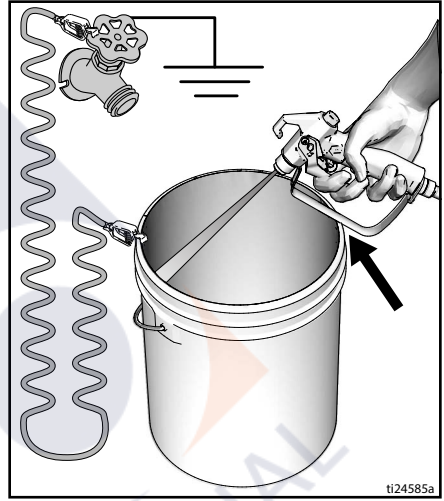

ti24585a

## Circuit Protection

Connect sprayers only to circuits which have the properly sized circuit breaker and/or fuses (for unit power requirements see **Technical Data**, pages 60-63).

## Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

**GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO.** These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

### **FOR GRACO CANADA CUSTOMERS**

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

# Graco Information

For the latest information about Graco products, visit [www.graco.com](http://www.graco.com).

For patent information, see [www.graco.com/patents](http://www.graco.com/patents).

**TO PLACE AN ORDER**, contact your Graco distributor or call 1-800-690-2894 to identify the nearest distributor.



*All written and visual data contained in this document reflects the latest product information available at the time of publication.*

*Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 334606

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA**

**Copyright 2014, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.**

[www.graco.com](http://www.graco.com)

Revision J, August 2022