INSTRUCTION MANUAL



AIR / WATER RETRACTABLE HOSE REEL

Model L-AWP1015









AIR / WATER RETRACTABLE HOSE REEL

DESCRIPTION

Thank you for purchasing a Lubemate hose reel. Each reel is a quality UV Stabilised reel, supplied complete with a delivery hose, feeder hose and mounting bracket.

FEATURES AND BENIFITS

- 1. The hose reel is UV stabilised.
- 2. The reel is easy to use positive latch and a built in hose layering mechanism to prevent hose bunching.
- 3. Durable construction, made from high quality impact resistant polypropylene, light in weight and more compact.
- 4. A powerful spring winds the hose back into the drum.



CAUTION

GENERAL SAFETY

Please read these operating instructions carefully and note the information given. Use these operating instructions to familiarize yourself with the product, the proper use and the safety instructions.









e Wear safet


structions gloves clothing

- * To prevent injury or damage do not let go of the hose during rewinding.
- * Hold the hose stop ball when retracting hose.
- * Do not disassemble hose reel.
- * Ensure the reel or hose is not in contact with any sharp objects or exposed to high temperatures.
- * Do not drop this reel or damage will occur.
- * Do Not use this product with any chemicals or liquid other than water.
- * Turn off air/water supply after use or at the end of the day.


Installation:

- 1. Take out the unit and accessories from the box,
- 2. Choose a suitable place near source of air/water.
- 3. Take the mounting bracket as a template to mark the position for screws and drill four holes on the wall(Fig.2)

| 1 | Hose reel | 1 |
|---|--------------------|---|
| 2 | Mounting bracket | 1 |
| 3 | Self-tapping bolts | 4 |

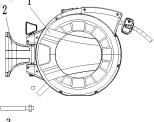

4. Fix the bracket by four self-taping screws accordingly, (Fig.1)

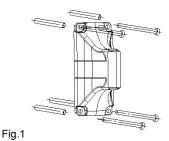

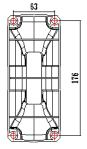


Fig.2



AIR / WATER RETRACTABLE HOSE REEL

5. Connect the reel to the mounting bracket.

Note:

- 1. The reel should be installed horizontally to a wall or post.
- 2. It is recommended to mount the reel approximately 1 meter above the ground.

Fig.3

Operation

- 1.Connect feeder hose and turn on supply
- 2. Pull out hose to desired length and stop.

Retract hose

- 1. Always hold hose when rectracting back into reel
- 2. Turn off the air/water supply.

Storage Cleaning

This Reel is maintenance-free and must not be cleaned internally with water.

Maintenance


When not in use, turn off supply, and release the line pressure

The reel must not be used to transmit any chemical and substance

When not in use for an extended period of time it is recommended to be stored in a cool dry place.

| Item | Description | Material | no off |
|------|-----------------------|-----------------|--------|
| 29 | Synchronous belt | PU | 1 |
| 28 | Right Cover | PP | 1 |
| 27 | Lead hose | Hybrid | 1 |
| 26 | Small Spring | Spring Steel | 1 |
| 25 | Inlet | Brass | 1 |
| 24 | Right Casing | PP | 1 |
| 23 | Tooth Wheel | PA | 1 |
| 22 | Slow return mechanism | PA6+GF30 | 1 |
| 21 | O-Ring | NBR | 2 |
| 20 | Outlet | Aluminium | 1 |
| 19 | Lock System | PA | 1 |
| 18 | Fix Piece | PP | 1 |
| 17 | Sleeve | ABS | 1 |
| 16 | Inner Hexagon Screw | Q235 | 1 |
| 15 | Drum | PP+GF30 | 1 |
| 14 | Mounting Bracket | PP+GF30 | 1 |
| 13 | Spring | Spring Steel | 1 |
| 12 | Mounting Pin | PA66+GF30 | 1 |
| 11 | Lock Plate | PP+GF30 | 1 |
| 10 | Hose guide system | PA+POM | 1 |
| 9 | Hose Stop | PP | 1 |
| 8 | Pre-loading Cap | PA6+GF30 | 1 |
| 7 | Output Hose | Hybrid | 1 |
| 6 | Handle | PP | 1 |
| 5 | Pre-loading Wheel | PA66+GF30 | 1 |
| 4 | Guide Pole | Stainless Steel | 1 |
| 3 | Lock Piece | POM | 1 |
| 2 | Left Casing | PP | 1 |
| 1 | Left Cover | PP | 1 |

EXPLODED DIAGRAM

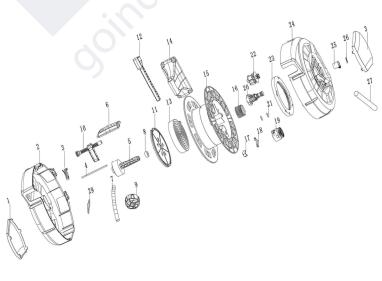

Note: no spare parts available



AIR / WATER RETRACTABLE HOSE REEL

TROUBLESHOOTING

| FAULT | DESCRIPTION | SOLUTION |
|-------------------|------------------------------|--|
| The hose does not | Hose has been pulled out too | Access the drum through the window and carefully rotate |
| retract | far and locked | the drum half a turn in the direction of the hose being |
| | | pulled out to release latch. |
| | Not enough spring tension | Add 1-2 turns extra turns: |
| | | 1. Remove the small cover, |
| | | 2. Use spanner to clamp the groove of preload wheel, |
| | | 3. Unscrew four bolts on the wheel, then rotate it for 1-2 |
| | | turns in counterclockwise, then fasten the bolts, and |
| | | replace the cover.Fig.4 |

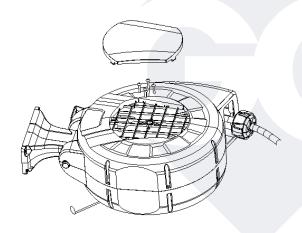


Fig.4

SPECIFICATIONS - L-AWP1015

| Maximum Pressure | 300psi/20bar |
|----------------------|--------------------------|
| Maximum Temperature | + 55 deg C |
| Hose type | Hybrid Polymer |
| Hose Size and Length | 3/8" (10mm) x 15m (50ft) |
| Inlet / Outlet | 1/4" BSPT (M) |
| Dimensions | 42.5 x 20.4 x 39.5cm |
| Weight | 5.5kg |